

20|20 Gen3 Network Light Status

What is the Device LED color, first of the DBM, then of the Display/ FVM?

Green

- This indicates good connectivity.
- If display or FVM will not connect with all LED indicators Green, Call Precision Planting Support

White

- Blinking:** The system firmware is updating.
- Solid:** The system is initializing.
- FVM:** Updating FVM

Yellow

- Blinking:** Software Update is in Process
- Solid:** System is initializing

Purple

DBM: System has not initialized properly.

FVM: No iPad or FieldView Connected

Purple: Diagnose for no communication to Climate FieldView. Verify USB adapter, iPad, FieldView app, and FVM are healthy. Hard reset iPad.

Blue

DBM: CCM/Display is not connected to DBM
Note: DBM light will be blue if CCM mode is set to 'Not Present'

FVM: DBM not connected

Blue: Diagnose for no communication between FVM and DBM. Verify Ethernet port, Ethernet Cable and FVM are healthy. Use boot software on FVM.

Red

DBM (Blinking Red)

Failure – Call Precision Planting Support

Display or FVM

Powering on – If issue persists, Call Precision Planting Support

Recommendation

Wait for system to initialize.

- If System does not change status in 5 minutes, power down device.
- If necessary, use reset button on DBM to force shut down.
- Finally, if rebooting does not resolve this issue, use boot software on DBM, then on Display or FVM.

Is the Display is on the 20|20 splash screen with four initializing dots?

No

Yes

Diagnose for no communication between the Display and DBM. Verify Ethernet port, Ethernet cable and Display are connected and healthy

Repeating color sequence

- Green/Purple, Blue/Yellow, Blue/Purple:** Device is Crashing – Call Precision Planting Support